


FLEXJOINT® POURING GRADE

CLOSED CELL
POLYETHYLENE FOAM

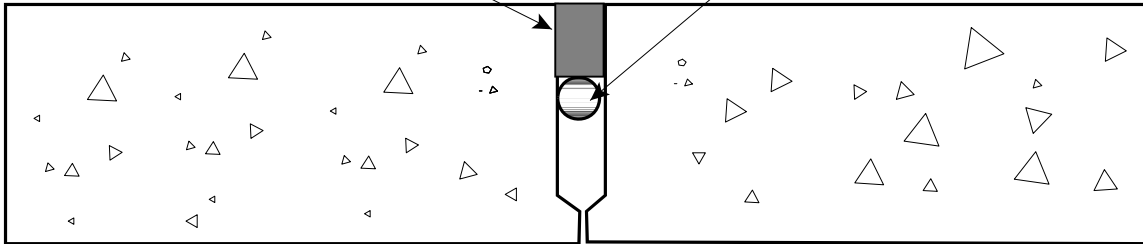


**SAWCUT
JOINT**

FLEXJOINT®
POLYSULFIDE
PRIMER ON JOINT
SIDEWALL

FLEXJOINT®
POLYSULFIDE

PLASTIC TAPE OVER EXPANSION BOARD

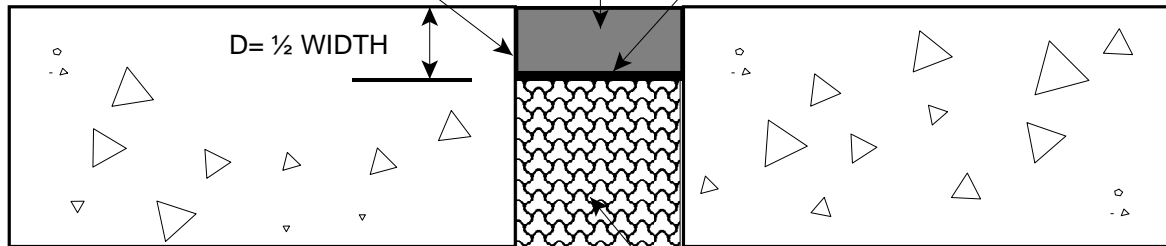

**EXPANSION
JOINT**

SAWCUTS MUST BE MADE
DURING INITIAL CURE
(USUALLY WITHIN 24
HOURS OF FINISHING.)

**NOTE: DO NOT INSTALL
FLEXJOINT® UNTIL
CONCRETE IS COMPLETELY
CURED AND AFTER THE
ENCLOSED ROOM HAS
REACHED NORMAL
TEMPERATURE.**

This drawing, including the principle of design, is the property of ErgonArmor and is submitted with the understanding that it will not be used for any purpose except that specified in writing by ErgonArmor. While all statements, technical information, and recommendations contained herein are based on information our company believes to be reliable, nothing contained herein shall constitute any warranty, express or implied, with respect to the products and/or services described herein and any such warranties are expressly disclaimed. We recommend that the prospective purchaser or user independently determine the suitability of our product(s) for their intended use. No statement, information or recommendation with respect to our products, whether contained herein or otherwise communicated, shall be legally binding upon us unless expressly set forth in a written agreement between us and the purchaser/user.

CED 1021 10/12 SUPERSEDES 04/01
JOINT FILLING IN CONCRETE FLOORS

NO SCALE
DRAWN BY: BEF
COPYRIGHT: ERGONARMOR
CORROSION ENGINEERING

